

Group:	4000 Pad	Notes:
Form:	SP1009	Refer to SP1009-DWG for major component drawing.
Date:	December 2, 2009	Refer to TSB-3005 for hardware kit breakdown.
File:	Alternator Parts List Section	

Identify the part number of the unit you have. In addition to identifying the part number from the part label it is also required that you identify the REV level. It is probable that no REV level is present; if so, utilize the part number only to identify the appropriate part. However, if a REV level is present, choose the applicable part for that REV level which is listed below the part number.



Rev. D

Rev. B


“Rev.” This indicates the revision letter on the label. If your unit is this revision or later, use this service component.

Component View	Front Housing Spacer, bearing, retainer	Rotor	Rear Housing, bearing	Stator	Rectifier Negative & hardware	Brush Box
						Or
Model	1	2	3	4	5	6**
A0014907PAH	A014103232S	A020105347S	A011105345S	A022103502S	A051105387S	A009104179S
A0014911PA	A014103232S	A020104836S	A011104838S	A022103502S	A051104337S	A009102829S
A0014912PGH	A014103232S	A020104805S	A011105345S	A022102689S	A051105384S	A009104179S
A0014913PA	A014103232S	A020104836S	A011104838S	A022103502S	A051104337S	A009097082S
A0014920PAH	A014103232S	A020105447S	A011104811S	A022103502S	A051104337S	A009102829S
A0014939AAH	A014103232S	A020103856S	A011104821S	A022103505S	A051104337S	A009102829S
Rev. E						
A0014939PAH	A014103232S	A020103856S	A011104821S	A022103505S	A051104337S	A009103839S
A0014939PGH	A014103232S	A020103856S	A011104142S	A022103505S	A051104337S	A009103839S
Rev. D			A011104821S			A009101711S
A0014940PA	A014103232S	A020104115S	A011104136S	A022103487S	A051104337S	A009297082S
Rev. E		A020104846S	A011104838S			
A0014942PA	A014103232S	A020104117S	A011104136S	A022103502S	A051104337S	A009097082S
Rev. L		A020104836S	A011104838S			
A0014943PGH	A014103232S	A020103856S	A011103859S	A022103505S	A051104337S	A009102829S
Rev. B			A011104343S			
A0014944PA	A014103232S	A020104117S	A011104136S	A022103502S	A051104337S	A009102829S
Rev. H		A020104836S	A011104838S			
A0014945AAH	A014103232S	A020103856S	A011104343S	A022103505S	A051104337S	A009103839S
A0014947PA	A014103232S	A020104117S	A011104136S	A022103502S	A051104337S	A009097082S
Rev. L		A020104836S	A011104838S			
A0014947PAH	A014103232S	A020102969S	A011102133S	A022103502S	A051104337S	A009097082S
Rev. F		A020104819S	A011104811S			
A0014947PGH	A014103232S	A020102969S	A011104136S	A022103502S	A051104337S	A009097082S
Rev. C		A020104819S	A011104838S			
A0014948PA	A014103232S	A020104115S	A011104136S	A022103487S	A051104337S	A009099290S
Rev. J		A020104846S	A011104838S			

** See SP1009-DWG for details on items.

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for ‘do-it-yourselfers’, and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:



Group:	4000 Pad	Notes:
Form:	SP1009	Refer to SP1009-DWG for major component drawing.
Date:	December 2, 2009	Refer to TSB-3005 for hardware kit breakdown.
File:	Alternator Parts List Section	

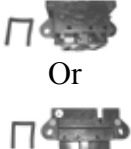Component View	Front Housing Spacer, bearing, retainer	Rotor	Rear Housing, bearing	Stator	Rectifier Negative & hardware	Brush Box
						 Or 
Model	1	2	3	4	5	6**
A0014949PA	A014103232S	A020104117S	A011104136S	A022103502S	A051104337S	A009102829S
Rev. H		A020104836S	A011104838S			
A0014949PAH	A014103232S	A020102969S	A011102133S	A022103502S	A051104337S	A009102829S
Rev. E		A020104819S	A011104811S			
A0014949PGH	A014103232S	A020102969S	A011104136S	A022103502S	A051104337S	A009102829S
Rev. F		A020104819S	A011104838S			
A0014951PAH	A014103232S	A020102968S	A011102133S	A022103487S	A051104337S	A009102829S
Rev. E		A020104810S	A011104811S			
A0014951PGH	A014103232S	A020102968S	A011104136S	A022103487S	A051104337S	A009102829S
Rev. F		A020104810S	A011104838S			
A0014953PAH	A014103232S	A020103856S	A011104343S	A022103505S	A051104337S	A009103839S
A0014957AAH	A014103232S	A020104130S	A011104343S	A022103502S	A051104337S	A009103839S
A0014958PA	A014103232S	A020105294S	A011104838S	A022103502S	A051104337S	A009097082S
A0014959PA	A014103232S	A020105294S	A011104838S	A022103502S	A051104337S	A009102829S
A0014962PA	A014103232S	A020102833S	A011104136S	A022102689S	A051104807S	A009102829S
Rev. E		A020104881S	A011104858S			
A0014962PAH	A014103232S	A020103173S	A011102699S	A022102689S	A051104807S	A009102829S
Rev. E		A020104805S	A011104802S			
A0014962PGH	A014103232S	A020104805S	A011104802S	A022102689S	A051104807S	A009102829S
A0014964PA	A014103584S	A020103486S	A011104138S	A022103489S	A051104799S	A009102829S
Rev. D		A020104829S	A011104858S			
A0014964PAH	A014103584S	A020103814S	A011102699S	A022103489S	A051104799S	A009102829S
Rev. B		A020104797S	A011104802S			
A0014966PAA	A014103232S	A020104113S	A011104194S	A022102689S	A051104807S	A009102829S
Rev. C		A020104881S	A011104936S			
A0014967PGH	A014103232S	A020104130S	A011103859S	A022103502S	A051104337S	A009104179S
Rev. C			A011104343S			
A0014974PA	A014103584S	A020103486S	A011102699S	A022103489S	A051104799S	A009102767S
Rev. B		A020104829S	A011104802S			
A0014975PAA	A014103232S	A020104007S	A011104142S	A022103502S	A051104337S	A009102829S
Rev. D		A020104946S	A011104821S			
A0014977AAH	A014103232S	A020103856S	A011104343S	A022103505S	A051104337S	A009102829S
Rev. C						

** See SP1009-DWG for details on items.

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Group:	4000 Pad	Notes:
Form:	SP1009	Refer to SP1009-DWG for major component drawing. Refer to TSB-3005 for hardware kit breakdown.
Date:	December 2, 2009	
File:	Alternator Parts List Section	

 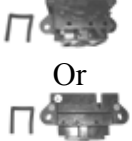Component View	Front Housing Spacer, bearing, retainer	Rotor	Rear Housing, bearing	Stator	Rectifier Negative & hardware	Brush Box
						 Or 
Model	1	2	3	4	5	6**
A0014978PAH	A014103232S	A020103856S	A011104343S	A022103505S	A051104337S	A009102829S
A0014979PAH	A014103232S	A020103856S	A011104343S	A022103505S	A051104337S	A009102829S
A0014980PAH	A014103584S	A020105123S	A011105186S	A022103489S	A051105179S	A009105174S
A0014980PAH-P	A014103584S	A020105123S	A011105186S	A022103489S	A051105179S	A009105174S
A0014980PGH	A014103584S	A020105123S	A011105186S	A022103489S	A051105179S	A009105174S
A0014981PGH	A014103232S	A020104130S	A011104343S	A022103502S	A051104337S	A009103839S
A0014982AAH	A014103232S	A020103856S	A011104343S	A022103505S	A051104337S	A009102829S
A0014991PA	A014103232S	A020104117S	A011104136S	A022103502S	A051104337S	A009102767S
Rev. H		A020104836S	A011104838S			
A0014992PA	A014103232S	A020104117S	A011104136S	A022103502S	A051104337S	A009102767S
Rev. H		A020104836S	A011104838S			
A0014993PA	A014103232S	A020104117S	A011102133S	A022103502S	A051104337S	A009102767S
Rev. C		A020104836S	A011104811S			

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Group:	4000 Pad	Notes:
Form:	SP1009	Refer to SP1009-DWG for major component drawing.
Date:	December 2, 2009	Refer to TSB-3005 for hardware kit breakdown.
File:	Alternator Parts List Section	

Component View	Fan	Regulator or Cover	Rectifiers Positive & hardware	Hardware Kit	Overhaul Kit Bearings, slip ring, O-ring, brushes	Capacitor
						 Or 
Model	7	8	9	10	11	12
A0014907PAH	A041102967S	R240105343S	A051104336S	K212104735S	K183104737S	N/A
A0014911PA	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014912PGH	A041102967S	R240105595S	A051104806S	K212104735S	K183104737S	N/A
A0014913PA	A041102967S	R240103725S	A051104336S	K212104735S	K183104737S	A031104788S
A0014920PAH	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014939AAH	A041102967S	A038100265S	A051104336S	K212104735S	K183104737S	A031096545S
Rev. E						A031104788S
A0014939PAH	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014939PGH	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014940PA	A041102967S	R240103725S	A051104336S	K212104735S	K183104736S	A031096545S
Rev. E					K183104737S	N/A
A0014942PA	A041102967S	R240103726S	A051104336S	K212104735S	K183104736S	A031104788S
Rev. L					K183104737S	
A0014943PGH	A041102967S	R240102835S	A051104336S	K212104735S	K183104736S	N/A
Rev. B					K183104737S	
A0014944PA	A041102967S	R240102835S	A051104336S	K212104735S	K183104736S	N/A
Rev. H					K183104737S	
A0014945AAH	A041102967S	A038100265S	A051104336S	K212104735S	K183104737S	N/A
A0014947PA	A041102967S	R240103725S	A051104336S	K212104735S	K183104736S	A031104788S
Rev. L					K183104737S	
A0014947PAH	A041102967S	R240103725S	A051104336S	K212104735S	K183104736S	A031104788S
Rev. F					K183104737S	
A0014947PGH	A041102967S	R240103725S	A051104336S	K212104735S	K183104736S	A031104788S
Rev. C					K183104737S	
A0014948PA	A041102967S	R240103725S	A051104336S	K212104735S	K183104736S	A031096545S
Rev. J					K183104737S	A031104788S
A0014949PA	A041102967S	R240102835S	A051104336S	K212104735S	K183104736S	N/A
Rev. H					K183104737S	
A0014949PAH	A041102967S	R240102835S	A051104336S	K212104735S	K183104736S	N/A
Rev. E					K183104737S	
A0014949PGH	A041102967S	R240102835S	A051104336S	K212104735S	K183104736S	N/A
Rev. F					K183104737S	
A0014951PAH	A041102967S	R240102835S	A051104336S	K212104735S	K183104736S	N/A
Rev. E					K183104737S	
A0014951PGH	A041102967S	R240102835S	A051104336S	K212104735S	K183104736S	N/A
Rev. F					K183104737S	

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Group:	4000 Pad	Notes: Refer to SP1009-DWG for major component drawing. Refer to TSB-3005 for hardware kit breakdown.
Form:	SP1009	
Date:	December 2, 2009	
File:	Alternator Parts List Section	

Component View	Fan	Regulator or Cover	Rectifiers Positive & hardware	Hardware Kit	Overhaul Kit Bearings, slip ring, O-ring, brushes	Capacitor
						
					Or	
Model	7	8	9	10	11	12
A0014953PAH	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014957AAH	A041102967S	A038100265S	A051104336S	K212104735S	K183104737S	N/A
A0014958PA	A041102967S	R240103725S	A051104336S	K212104735S	K183104737S	A031104788S
A0014959PA	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014962PA	A041102967S	R240102835S	A051104806S	K212104735S	K183104736S	N/A
Rev. E					K183104737S	
A0014962PAH	A041102967S	R240102835S	A051104806S	K212104735S	K183104736S	N/A
Rev. E					K183104737S	
A0014962PGH	A041102967S	R240102835S	A051104806S	K212104735S	K183104737S	N/A
A0014964PA	A041102967S	R240103495S	A051104798S	K212104735S	K183104736S	N/A
Rev. D					K183104737S	
A0014964PAH	A041102967S	R240103495S	A051104798S	K212104735S	K183104736S	N/A
Rev. B					K183104737S	
A0014966PAA	A041102967S	A038100265S	A051104806S	K212104735S	K183104736S	
Rev. C					K183104737S	
A0014967PGH	A041102967S	R240104128S	A051104336S	K212104735S	K183104737S	N/A
A0014974PA	A041102967S	R240104356S	A051104798S	K212104735S	K183104736S	N/A
Rev. B					K183104737S	
A0014975PAA	A041102967S	A038100265S	A051104336S	K212104735S	K183104737S	
A0014977AAH	A041102967S	A038100265S	A051104336S	K212104735S	K183104737S	A031096545S
Rev. C						A031104788S
A0014978PAH	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014979PAH	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014980PAH	A041102967S	R240105173S	A051104798S	K212104735S	K183104737S	N/A
A0014980PAH-P	A041102967S	R240105173S	A051104798S	K212104735S	K183104737S	N/A
A0014980PGH	A041102967S	R240105173S	A051104798S	K212104735S	K183104737S	N/A
A0014981PGH	A041102967S	R240102835S	A051104336S	K212104735S	K183104737S	N/A
A0014982AAH	A041102967S	A038100265S	A051104336S	K212104735S	K183104737S	A031104788S
A0014991PA	A041102967S	R240104104S	A051104336S	K212104735S	K183104736S	N/A
Rev. H					K183104737S	
A0014992PA	A041102967S	R240104104S	A051104336S	K212104735S	K183104736S	N/A
Rev. H					K183104737S	
A0014993PA	A041102967S	R240104104S	A051104336S	K212104735S	K183104736S	N/A
Rev. C					K183104737S	

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Group:	4000 Pad	Notes: Refer to SP1009-DWG for major component drawing. Refer to TSB-3005 for hardware kit breakdown.
Form:	SP1009	
Date:	December 2, 2009	
File:	Alternator Parts List Section	

Component View	AC Studs	Positive Stud	Negative Cover Plate	Temperature Sensor
				
Model	13	14	15	18
A0014907PAH	A116101443S	Z115105249S	N/A	N/A
A0014911PA	A116101443S	Z115102683S	A038101396S	N/A
A0014912PGH	A116101443S	Z115105249S	N/A	N/A
A0014913PA	A116101443S	Z115102683S	A038101396S	N/A
A0014920PAH	A116101443S	Z115102683S	A038101396S	N/A
A0014939AAH	A116101443S	Z115102683S	A038101396S	N/A
Rev. E				
A0014939PAH	A116101443S	Z115102683S	A038101396S	N/A
A0014939PGH	A116101443S	Z115102683S	A038101396S	N/A
Rev. D			A038101396S	
A0014940PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. E				
A0014942PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. L				
A0014943PGH	A116101443S	Z115102683S	A038101396S	N/A
Rev. B				
A0014944PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. H				
A0014945AAH	A116101443S	Z115102683S	A038101396S	N/A
A0014947PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. L				
A0014947PAH	A116101443S	Z115102683S	A038101396S	N/A
Rev. F				
A0014947PGH	A116101443S	Z115102683S	A038101396S	N/A
Rev. C				
A0014948PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. J				
A0014949PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. H				
A0014949PAH	A116101443S	Z115102683S	A038101396S	N/A
Rev. E				
A0014949PGH	A116101443S	Z115102683S	A038101396S	N/A
Rev. E				
A0014951PAH	A116101443S	Z115102683S	A038101396S	N/A
Rev. E				
A0014951PGH	A116101443S	Z115102683S	A038101396S	N/A
Rev. F				
A0014953PAH	A116101443S	Z115102683S	A038101396S	N/A
A0014957AAH	A116101443S	Z115102683S	A038101396S	N/A

Component View	Brush Kit
	
Model	
All Models	K185104697S

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:



Group:	4000 Pad	Notes:
Form:	SP1009	Refer to SP1009-DWG for major component drawing. Refer to TSB-3005 for hardware kit breakdown.
Date:	December 2, 2009	
File:	Alternator Parts List Section	

Component View	AC Studs	Positive Stud	Negative Cover Plate	Temperature Sensor
				
Model	13	14	15	18
A0014958PA	A116101443S	Z115102683S	A038101396S	N/A
A0014959PA	A116101443S	Z115102683S	A038101396S	N/A
A0014962PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. E				
A0014962PAH	A116101443S	Z115102683S	A038101396S	N/A
Rev. E				
A0014962PGH	A116101443S	Z115102683S	A038101396S	N/A
A0014964PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. D				
A0014964PAH	A116101443S	Z115102683S	A038101396S	N/A
Rev. B				
A0014966PAA	A116101443S	Z115102683S	A038101396S	N/A
Rev. C				
A0014967PGH	A116101443S	Z115102683S	A038101396S	N/A
Rev. C				
A0014974PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. B				
A0014975PAA	A116101443S	Z115102683S	A038101396S	N/A
Rev. D				
A0014977AAH	A116101443S	Z115102683S	N/A	A175104215S
Rev. C				
A0014978PAH	A116101443S	Z115102683S	N/A	N/A
A0014979PAH	A116101443S	Z115102683S	A038101396S	N/A
A0014980PAH	A116101443S	Z115105249S	N/A	N/A
A0014980PAH-P	A116101443S	Z115105249S	N/A	N/A
A0014980PGH	A116101443S	Z115105249S	N/A	N/A
A0014981PGH	A116101443S	Z115102683S	A038101396S	N/A
A0014982AAH	A116101443S	Z115102683S	A038101396S	A175104215S
A0014991PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. H				
A0014992PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. H				
A0014993PA	A116101443S	Z115102683S	A038101396S	N/A
Rev. C				

Component View	Pulley	Flange
		
Model		
A0014907PAH	K176105263S	N/A
A0014980PAH	N/A	K172105084S
A0014980PAH-P	K176105256S	N/A

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Group:	4000 Pad	Notes:
Form:	SP1009-DWG	Refer to SP1009-4000Pad for parts breakdown.
Date:	November 2, 2007	Refer to TSB-3005 for hardware kit breakdown.
File:	Alternator Parts List Section	

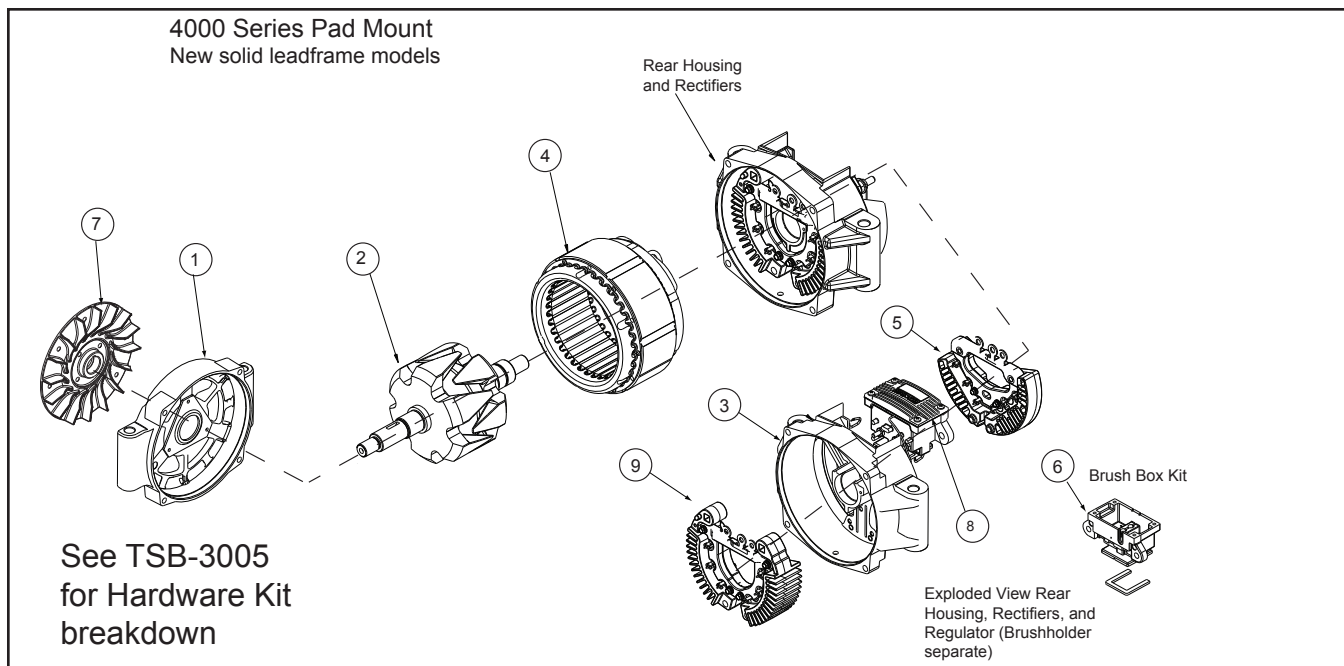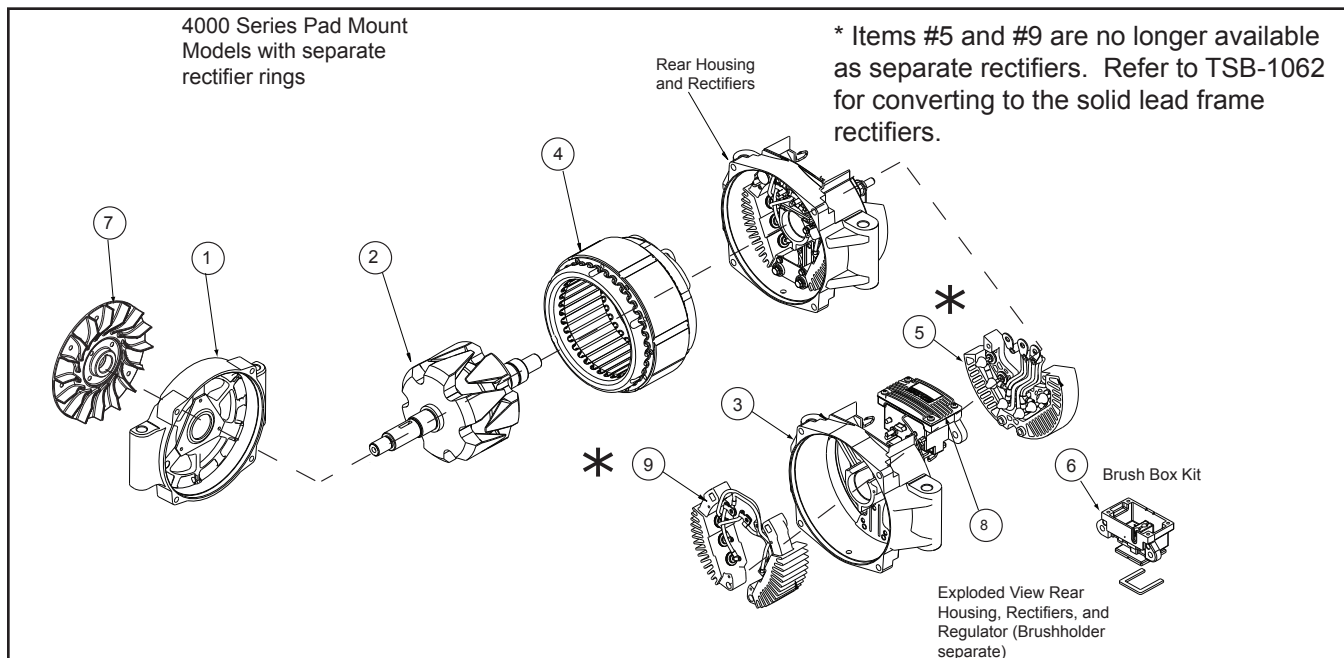


Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Source: Leece-Neville Heavy Duty Systems Division - Arcade, NY USA
Date: March 30, 2009
Bulletin No: TSB-3005
Models: 185A-320A 4900 Alternators
Subject: Hardware Kit for 4000 Series Pad Mount Alternators K212104735S

4000 Series Pad Mount

NOTE: All of these components are part of the hardware kit and not available for individual purchase.

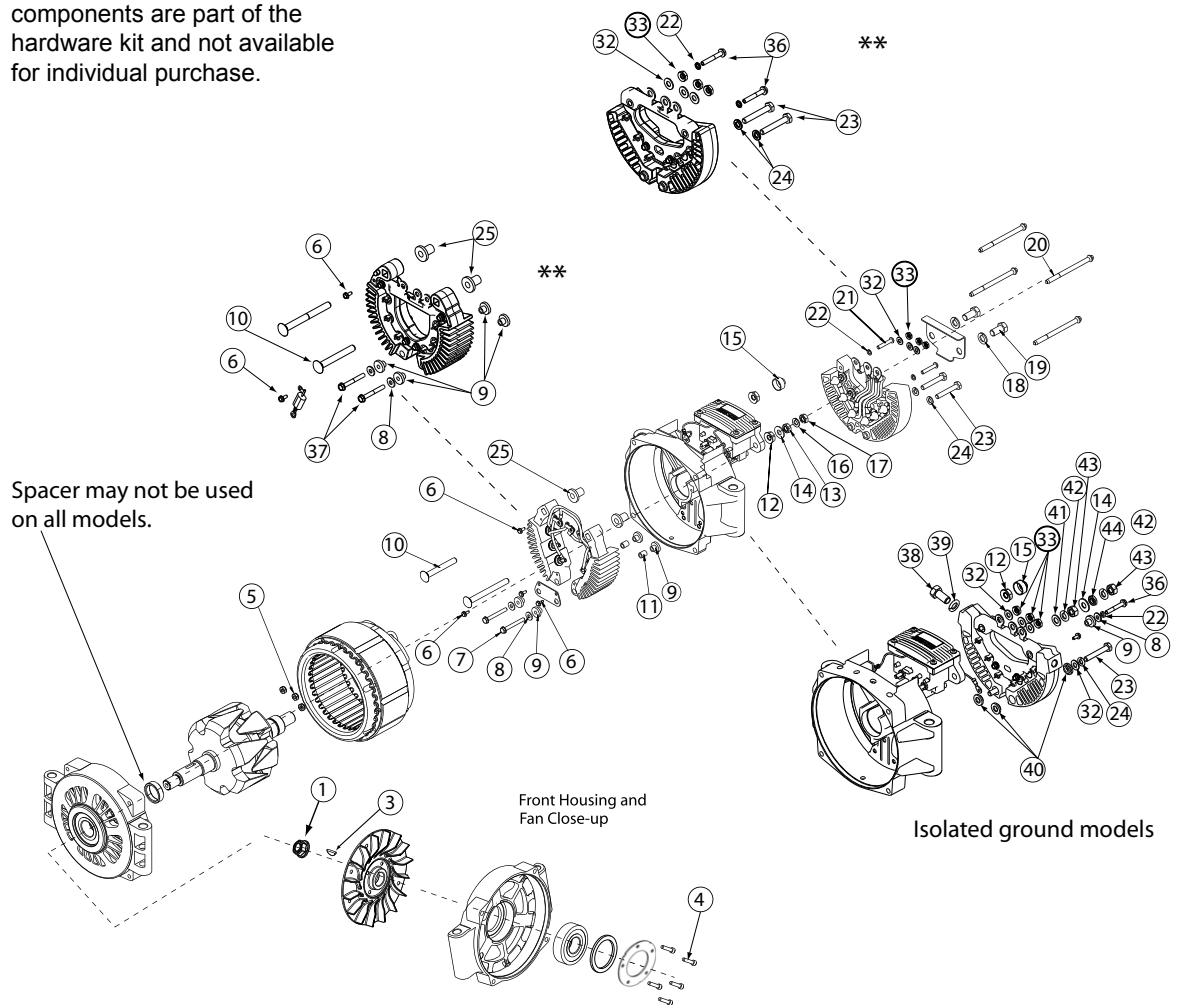


** Rectifier rings available on current production models and service parts.

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:


Date: March 30, 2009

Bulletin No: TSB-3005


Ignition Excite

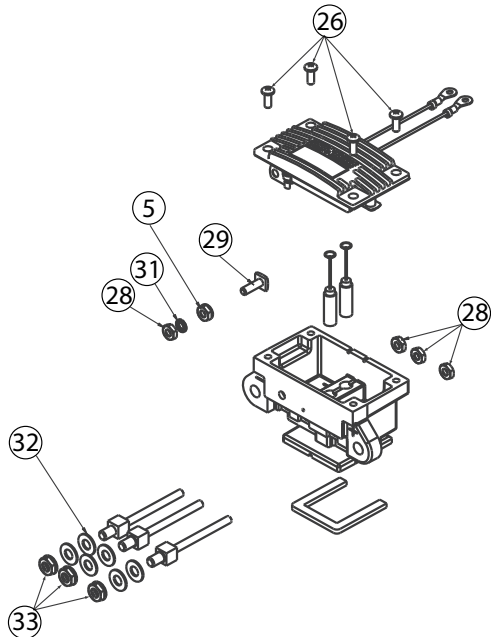


Ignition Excite
Remote Sense

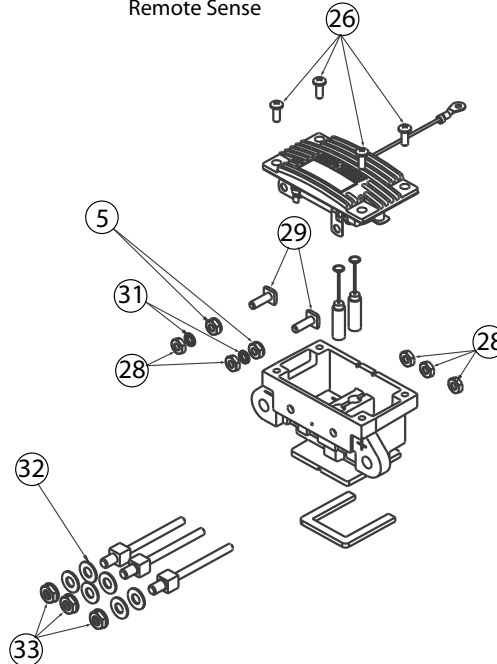

Self Excite

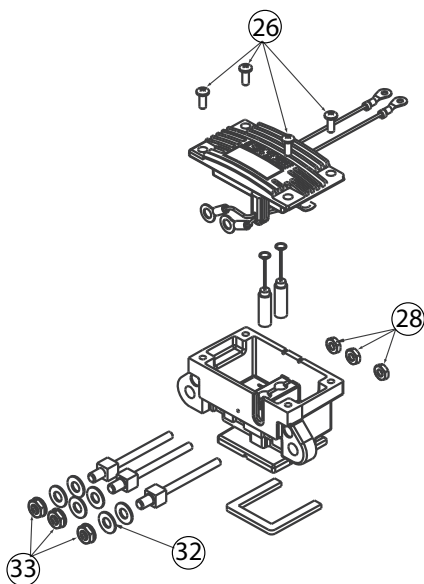

Remote Regulated

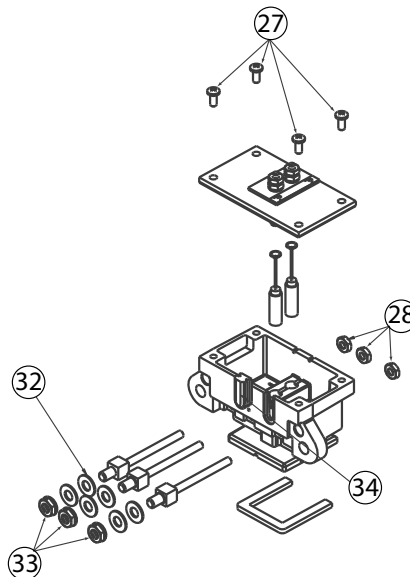

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Date: March 30, 2009

Bulletin No: TSB-3005

Description	Qty.	Key	Where used
NUT, 5/8-18, LOCK	1	1	Fan Nut
KEY, WOODRUFF #8	1	3	Shaft key
SCREW, THREAD FORMING	5	4	Front housing retainer plate holding screw
NUT	3	5	Internal stator nuts to AC-taps
SCR TPG 6-32x11/32phw	4	6	Internal Positive Rectifier connector plate screw
#10 HEX/WSHR. Hd. Scr.	2	7	Hex screw for internal Rect. Jumper plate
WASHER FLT.203-.500-.0	4	8	Flat washer on internal rectifier connector plate screws
BUSHING , INS.	6	9	Black internal post insulator
BOLT 5/16 x 2-1/2"	1	10	Positive post bolt, short side with clear cap, no connect
BUSHING, INSULATION	2	11	Cardboard insulator for internal bolt insulation
NUT, TENZ -5/16-18	2	12	Con. Nut for positive post
NUT,HEX 5/16-18	1	13	External positive post nut, lower
WASHER 5/16"	1	14	External positive post flat washer
STUD COVER	1	15	Used to cover positive post bolt externally that is not used.
WASHER LCK	2	16	External positive post lockwasher
NUT	1	17	External positive post nut, top
LOCKWASHER 3/8"	2	18	Lockwasher used on negative bolts externally
BOLT - 5/16" x 3/4"	2	19	External negative Bolts, holds negative plate
BOLT- 3/8" x 3/4"	2	19	External negative Bolts, holds negative plate
BOLT BUTTON HEAD-5/16"x 3/4	1	19	External negative Bolts, holds negative plate
THRU.BOLT PACKAGE-3.5	4	20	Thru-Bolts holds Alternator together/ Shorter (3.5"L)
BOLT,THRU 1/4X20- 4.12	4	20	Thru-Bolts holds Alternator together/ Longer (4.12"L)
SCREW	2	21	External negative rectifier flat head screws
LOCKWASHER #10	2	22	Used on screws in negative external rectifier
SCREW	2	23	External negative rectifier hold down bolts
LOCKWASHER 1/4"	2	24	Lockwasher on external negative rectifier bolts/ Hold down bolts
BUSHING , INS.	2	25	White internal post insulator
SCREW	4	26	Regulator screws for internal regulator
SCREW	4	27	Regulator screws for regulator plate with external regulator
NUT,STEEL #10-32	3	28	Used on brush box internal nut stator is attached above nuts
SCREW	3	29	Square headed screw used on brush box
LOCKWASHER #10	2	31	Used on brush box, IGN term. SYNC term.
WSHR FLT .266-.562-	8	32	Flat washer for brush box AC-Taps
NUT	3	33	Ac Tap Con Nuts
GROMMET - NO HOLE	1	34	Gromet on brush box

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Date: March 30, 2009

Bulletin No: TSB-3005

Description	Qty.	Key	Where used
SCREW	2	35	Rectifier plate hold screws
SCREW #10 X 1 1/4"	2	36	Holds negative rectifier to rear housing
SCREW #10 X 1 1/2"	2	37	Holds positive rectifier to rear housing
BOLT-M10X20	1	38	Neg cable bolt
M10 LOCKWASHER	1	39	Neg cable bolt lockwasher
INSULATOR	4	40	Neg ring insulator
WASHER FLAT 5/16"	1	41	Positive bolt hardware
WASHER FLAT 5/16"	2	42	Positive bolt hardware
NUT M8	2	43	Positive bolt hardware
NUT M8	1	44	Positive bolt hardware

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at: